

Universal Ball-Lok (UBL) Chuck

Component Parts / Service Kits

	Description	Included in Kit Numbers					
		1	2	3	4	5	6
B	Retaining Ring						1
C	Retaining Spacer						1
E	Centralizing Pin						3
H	Eccentric Bearing		3				
J	Spring Cap	3		1			
K	Arm Spring	3		1			
L	Arm Key	3	3	1			
M	Homing Spring	3		1			
N	Restrictor Pin	3		1			
O	Homing Pin	6		2			
P	T-Nut					3	
Q	Safety Screw					3	
S	Jaw Bolts					6	
T	Arm			1			
U	Arm Seal	3		1		3	
V	Front Bearing			1		3	
X	Grease Fitting	4					
Y	Relief Valve	1					

