

► Read and follow these safety instructions first and take notice of the operating instructions.

Safety instructions

1. The installation, initial operation and maintenance may be done by a qualified expert with electrical know-how only.
2. Comply with the local and statutory rules and regulations and/or the VDE 0100.
3. Take notice of the temperature specifications at the data plate.
4. A fuse (with max. 4A) has to be connected in series to the voltage supply.
5. Protect the signal contact from voltage peaks when inductive loads are connected.
6. The device may put into operation if it is closed, only.
7. Switch off the power supply, before opening the device. (touchdangerous voltage)

Operating instructions

1. Description

1.1 Intended use

The level indicator observes the filling level as a limit switch in silos and vessels. It can be used as full, demand and empty indicator for dusty and powdery, granulated and grainy bulk goods with a max. grain size up to 100 mm and with a bulk density of 0.3 t/m³... 2.5 t/m³.


1.2 Function

The bulk goods presses with its weight against the membrane. A tappet directly transfers the pressure from the membrane to the switch. When the bulk goods are decreasing, pressure is taken off the membrane and the switch will be interconnected.

1.3 Technical data

Manufacturer	MOLLET
	Füllstandtechnik GmbH
Address	Industriepark RIO 103 74706 Osterburken
Name	Membrane level indicator
Type	MFB
Bulk goods	NBR -20 °C ... +80 °C
temperature	VITON -20 °C ... +150 °C
	Stainless steel 304 -30 °C ... +200 °C
Ambient temperature	T_a -20 °C ... +80 °C
Signal contact	change-over contact, potentialfree
Capacity of the contact	Contact 4 A / 250 V AC
Switching voltage	24 V ... 250 V AC or 12 V ... 125 V DC
Response delay	none
Cable entry	Cable gland M20x1.5
Cable connection	Scrwe M4 for cable socket
Type of protection	IP40
acc. to DIN EN 60529	IP53 if cable gland is downwards
	IP65 with stainless steel membrane
Overpressure safety	up to 5 bar
Weight	1.85 kg
Maintenance	none
Mounting position	any position

1.4 Dimensions

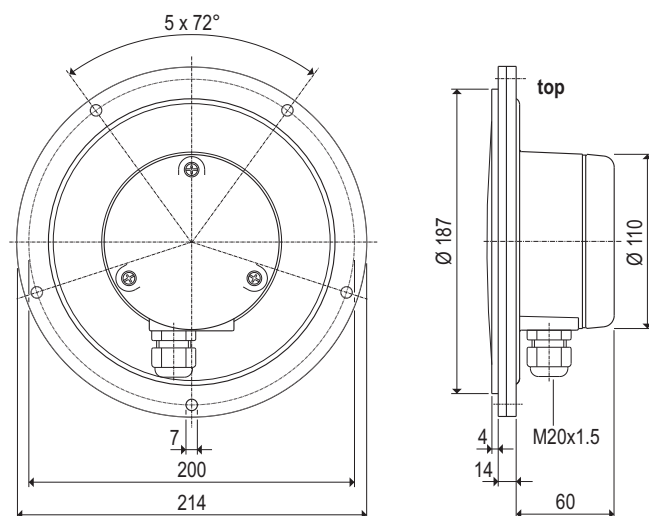

002-0205

1.5 Sensitivity adjustable

with membrane	NBR	from 100 g ... 200 g
with membrane	VITON	from 100 g ... 200 g
with membrane	Stainless steel	from 200 g ... 500 g

1.6 Materials

Housing	Aluminium
Type	Membrane Mounting ring
MFB-NA	= NBR Aluminium
MFB-NE	= NBR Stainless steel 1.4301 / 304
MFB-VA	= VITON Aluminium
MFB-VE	= VITON Stainless steel 1.4301 / 304
MFB-EA	= Stainless steel 304 Aluminium
MFB-EE	= Stainless steel 304 Stainless steel 1.4301 / 304

2. Installation

2.1 Preparation


- Check the membrane of visual transport damage.
- Read and follow the safety instructions and the operating instructions, before handling with the device !

2.2 Mounting in the vessel

Position the level indicator with the gasket at the provided flange and fix it with 5 washers and screws M6.

2.3 Electrical connection

Circuit diagram

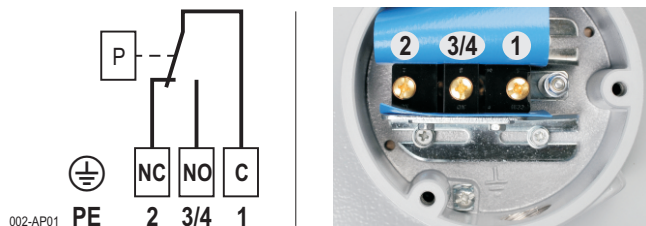


2.4 Cable gland

- After electrical connection, tighten the cable gland.
- Screw the cap nut, until the cable entry is closed tightly.

3. Commissioning

- Put the level indicator into operation only, if the installation and the electrical connection have been done correctly.
- The level indicator is presetted at sensitive.
- With the adjusting nut the device can be adjustable insensitive. Clockwise insensitive.

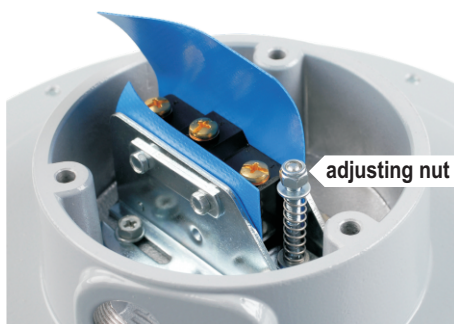

4. Utilization

4.1 Normal operation

- Use the level indicator in its intended application only.
- The level indicator is provided for use in silos or vessels with pressureless operation.
- Comply with the specifications on the data plate. Check the membrane of the level indicator, when the permissible temperature of bulk goods was exceeded or was fallen short off.
- Damaged devices have to put out of operation immediately.

4.2 Inexpert handling

- Ignoring of the safety instructions and the operating instructions.
- Not intended use.
- Mounting of spare parts which are no original parts.
- Violation against applicable law and standards.

5. Maintenance and servicing

5.1 General informations

- Do maintenance work only, if the silo or the vessel is empty and if there is no overpressure or vacuum.
- Use original spare parts only.

5.2 Maintenance

- Inspect in regular intervals if there is any wear or abrasion at the membrane. Define the control intervals, depending on the characteristics of the bulk goods.
- In case of damage or abrasion, replace the membrane immediately with a new membrane.

5.3 Servicing

- Damaged parts have immediately replaced with similar.
- Until the complete reconstruction of the proper function, the level indicator must not be used any more.

6. Storage


- Store the level indicator dry and dust-free.
- Protect the membrane against pointed objects and ultraviolet radiation.

7. Disposal

- The level indicator can be recycled.
- The disposal applies to the valid environmental guidelines according to the location of the carrier and the local manufacturing conditions.

 Ersatzteile / Spare parts

 **MFB**

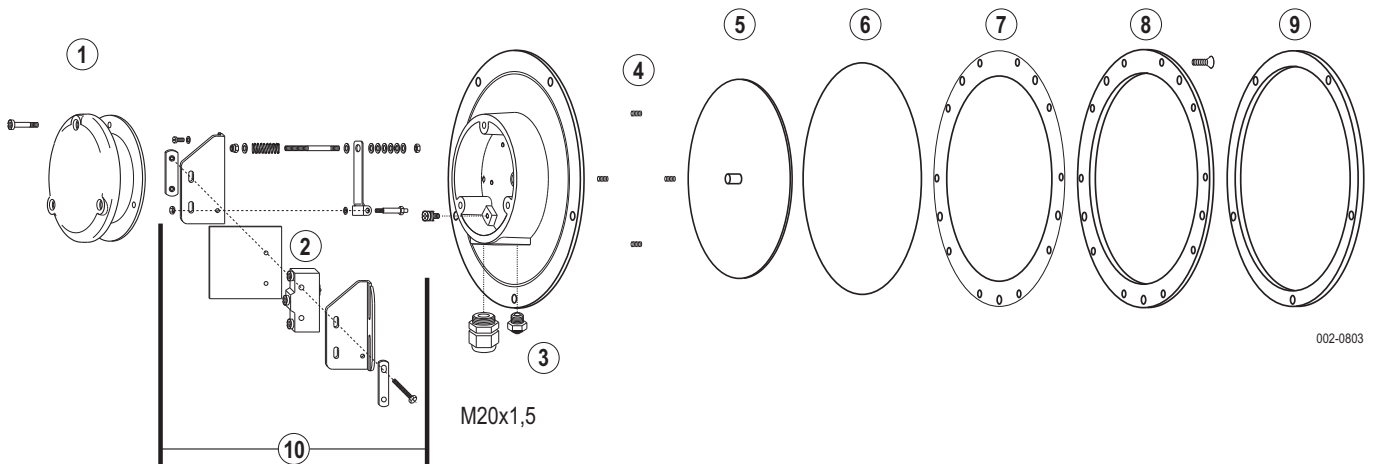

Pos. Item	Benennung Reference	Bestellcode Order code	Werkstoff Material
1	Deckeldichtung / Cap seal	MFB-DS01	EDPM
2	Schalter / Switch	Z-15G-B	
3	Filter / Filter	395028-AVS	Messing / Brass
4	Feder / Spring	MFB-FR01	Federstahl / Spring steel
5	Membrane / Membrane V . Membrane / Membrane N .	MFB-MB-VI MFB-MB-NR	VITON NBR
6	Membrane / Membrane E .	MFB-MB-VA	Edelstahl 1.4301 / Stainless steel 304
7	Dichtring / Seal ring	MFB-DS02	
8	Haltering / Mounting ring . E Haltering / Mounting ring . A	MFB-HR-VA MFB-HR-AL	Edelstahl 1.4301 / Stainless steel 304 Aluminium
9	Flanschdichtung / Gasket	MFB-FD01	NBR-Schaumstoff / NBR foam
10	Ersatzteilpaket inkl. Schalter für MFB-E . Spare part kit incl. switch for MFB-E .	MFB-EP11	
10	Ersatzteilpaket inkl. Schalter für MFB-V . / MFB-N . Spare part kit incl. switch for MFB-V . / MFB-N .	MFB-EP12	





EG-Konformitätserklärung EC-Declaration of Conformity

Wir/We

MOLLET Füllstandtechnik GmbH

Industriepark RIO 103
D-74706 Osterburken
Tel. 06291 64400 Fax 06291 9846

erklären hiermit, dass die Geräte:

declare that the devices:

Füllstandanzeiger
Füllstand-Grenzschalter der Typenreihen:

Level indicator
Level limit switch of type:

D ... , M ... , P ... , R ... , T ... , V ...

D ... , M ... , P ... , R ... , T ... , V ...

auf die sich diese Erklärung bezieht, den folgenden Normen
oder normativen Dokumenten entsprechen:

to which this declaration relates is in accordance with
the following standards or other normative documents:

Richtlinie 2006/95/EG (NSR-Richtlinie)
Richtlinie 2004/108/EG (EMV-Richtlinie)

Directive 2006/95/EC (Directive LVD)
Directive 2004/108/EC (Directive EMC)

und

and

EN 61010-1, EN 60529
EN 61326-1

EN 61010-1, EN 60529
EN 61326-1

Die grundlegenden Sicherheits- und Gesundheitsanforderungen werden erfüllt gemäß den Bestimmungen der Richtlinien und durch Einhaltung der Normen soweit es im Rahmen des Lieferumfanges möglich ist.

The Essential Health and Safety Requirements are assured by compliance with the directive and observance of the normative documents, as far as the scope of delivery allows.

Osterburken, 07. Januar 2010

Osterburken, January 7th 2010



Wolfgang Hageleit

Diese Erklärung darf nur unverändert
weiterverbreitet werden.

This declaration is only allowed to
hand out in unchanged form.

